LUXMAN L58A

MODEL

SERVICE MANUAL

122

Luxman L58A/L55A

Exploded View
L-58A/L-55A

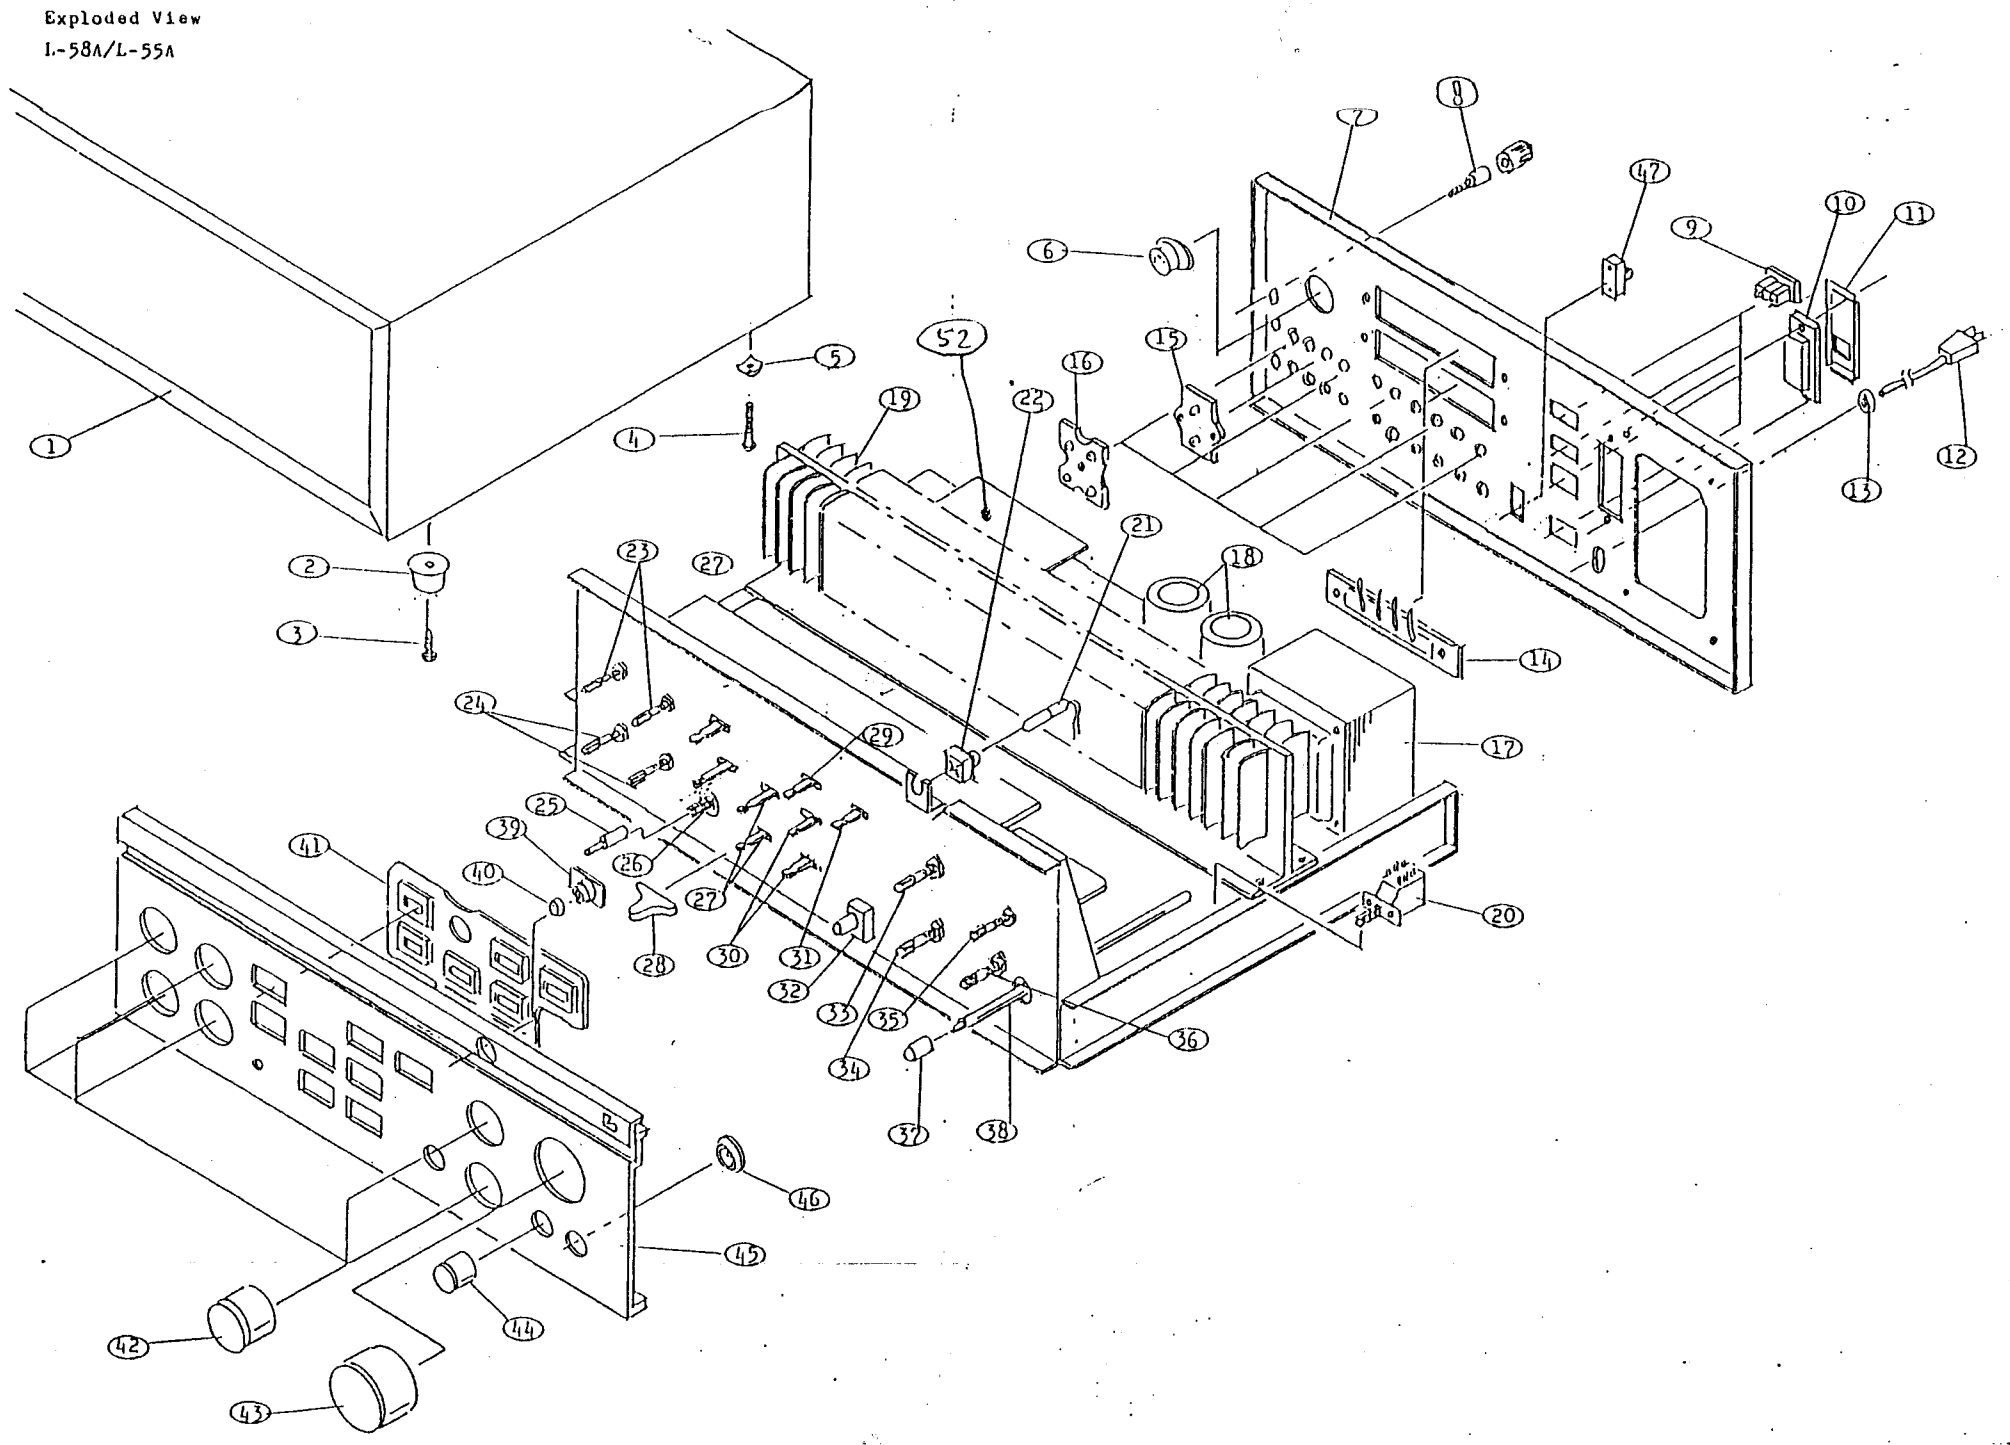

Exploded View Parts List
Model :L-58A/L-55A

Symbol No.	Stock No.	Description		Q'ty
1	WB1070	Wooden Case	(E,J)	1
	WB1089	Wooden Case	(A)	1
	WB1005A	Ventilation	(A)	4
2	WN1018	Foot		4
3	YCG38A25	Screw, M3.8x25		4
4	YAA40A25	Screw, M4x25		8
5	UR1125	Bkt.		8
6	AS0002	Socket, Din		1
7	UC1141	Rear, Panel	(L-55A)(J,U)	1
	UC1142	Rear, Panel	(L-55A)(S)	1
	UC1143	Rear, Panel	(L-55A)(E,A)	1
	UC1136	Rear, Panel	(L-58A)(J,U)	1
	UC1137	Rear, Panel	(L-58A)(S)	1
	UC1138	Rear, Panel	(L-58A)(E,A)	1
8	AG0110	Terminal, GND		1
9	AC0010	AC Outlet	(A,E)	4
	AC0051	AC Outlet	(U,J)	4
10	AC0013	Socket, Voltage	(A,E)	1
	AC0014	Plug, Voltage	(A,E)	1
11	UJ1066	Cover	(A,E)	1
12	BK0019	AC Cord	(AZ,EZ)	1
	BK0023	AC Cord	(AG)	1
	BK0029	AC Cord	(AK,EK)	1
	BK0048	AC Cord	(J)	1
13	BU0033	Bush, Cord	(AZ,EZ)	1
	BU0039	Bush, Cord	(AK,EK,AG)	1
	BU0080	Bush, Cord	(J)	1
14	AT0110	Terminal, SP		2
15	AT0128	Pin Jack, 2P		1
16	AT0127	Pin Jack, 4P		5
17	PT2387	Trans, Power	(L-58A)(J)	1
	PT2426	Trans, Power	(L-58A)(A,E)	1
	PT2396	Trans, Power	(L-55A)(J)	1
	PT2425	Trans, Power	(L-55A)(A,E)	1
18	CE1447	Cap, 63V 10,000uF	(L-55A)	1
	CE1447A	Cap, 63V 10,000uF	(L-55A)	1
	CE1445	Cap, 80V 10,000uF	(L-58A)	1
	CE1445A	Cap, 80V 10,000uF	(L-58A)	1

L-55A / L-58A

Symbol No.	Stock No.	Description		Q'ty
19	BE1071	Heatsink	(L-55A)	1
	BE1070	Heatsink	(L-58A)	1
20	SP0063	SW, Power	(J)	1
	SP0090	SW, Power	(A,E)	1
21	AL0039	Lamp		1
22	WZ0002	Holder, Lamp		1
23	RV0233	VR, 50KBx2	(Tone)	2
24	SR0128	SW, Rotary	(Tone)	2
25	WJ1127	Knob		1
26	SP0129	SW, Push SUF12		1
27	SL0050	SW, Lever		4
28	WJ1121	Knob		8
29	SL0051	SW, Lever		1
30	SL0052	SW, Lever		2
31	SL0053	SW, Lever		1
32	AJ0014	Jack HD		1
33	SR0125	SW, Rotary		1
34	SR0126	SW, Rotray		1
35	RV0256	VR, 60Kx2	(Volume)	1
36	RV0231	VR, 250KMN	(Balance)	1
37	WJ1125	Knob, Power		1
38	UZ1166	Shaft		1
39	WG1011	Pilot		1
40	WG1004	Pilot		1
41	WD1128	Escutcheon		1
42	WH1097	Knob		6
43	WH1096	Knob	(Volume)	1
44	WH1098	Knob	(Balance)	1
45	WA1172	Front Panel(L-55A)		1
	WA1170	Front Panel(L-58A)		1
46	WE1051	Protector		1
47	SS0014	SW, Slide		1
*	ME0130	Owner's Manual(L-55A)	(EX)	1
*	MA0114	Owner's Manual (L55A)	(J)	1
*	ME0125	Owner's Manual (L-58A)	(EX)	1
*	MA0109	Owner's Manual (L-58A)	(J)	1

52 SS 0053 L Cartridge Switch

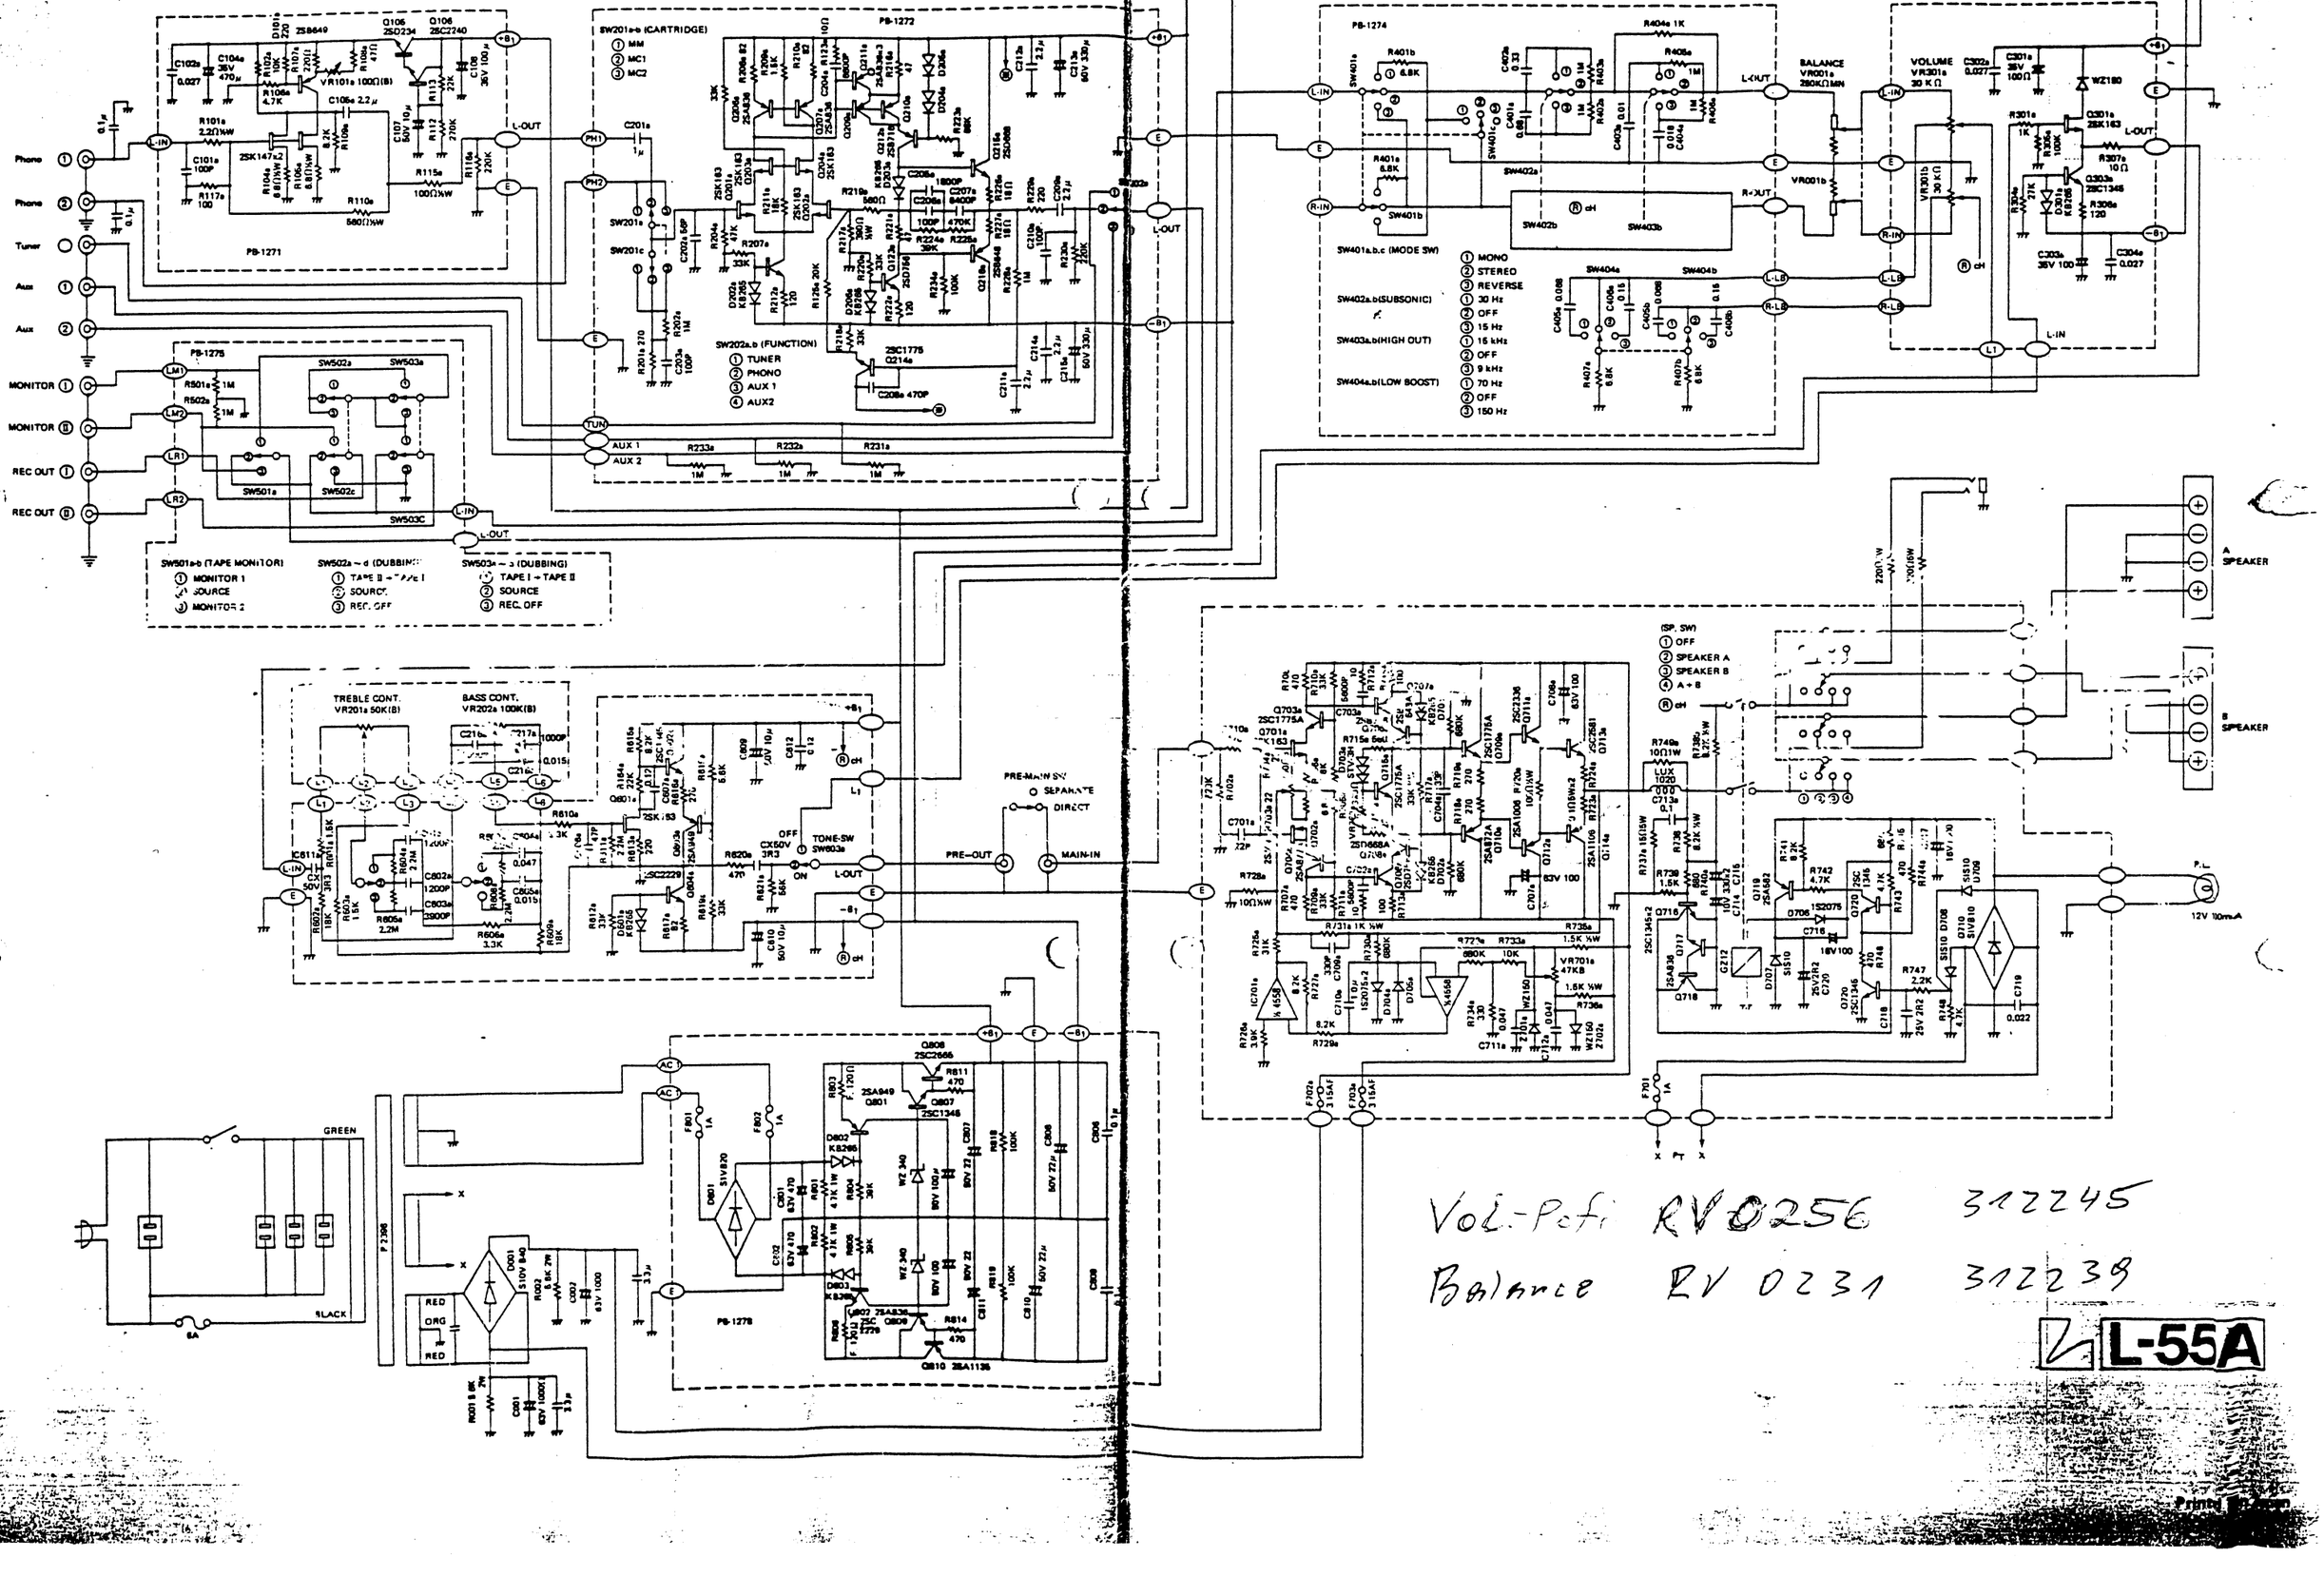

Vol.-Pot. RV0256 312245

Balance RV0231 312238

L-55A